


Leapfrog Works Surface Types

For Leapfrog Works Version 2022.1

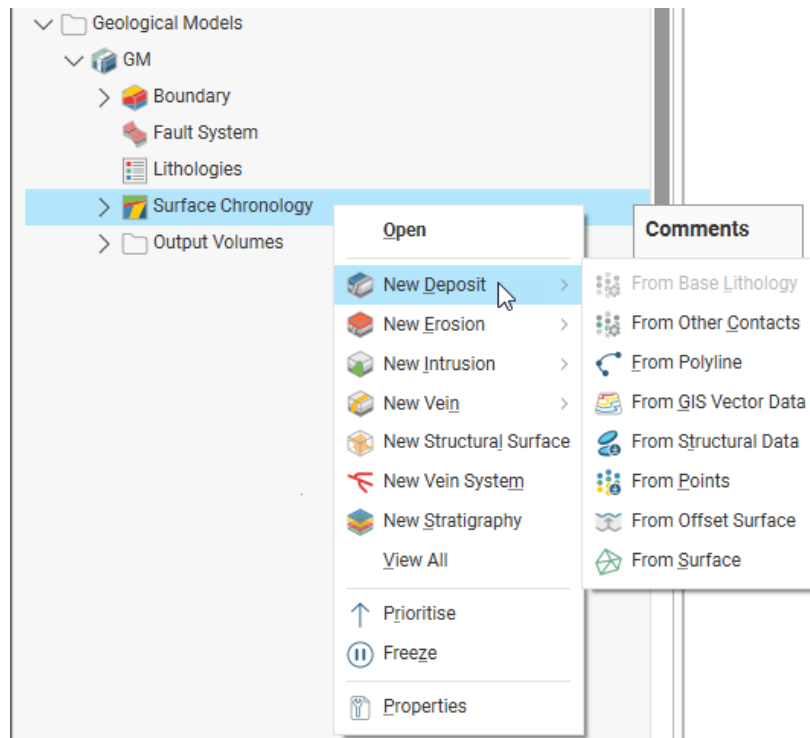


Core Contact Surface Types

- Deposit and Erosion Surfaces
- Intrusion Surfaces
- Vein Surfaces


Specific Function Surfaces

- Structural Surfaces
- Offset Surfaces
- Vein System Surfaces
- Stratigraphic Sequences


Core Contact Surface Types

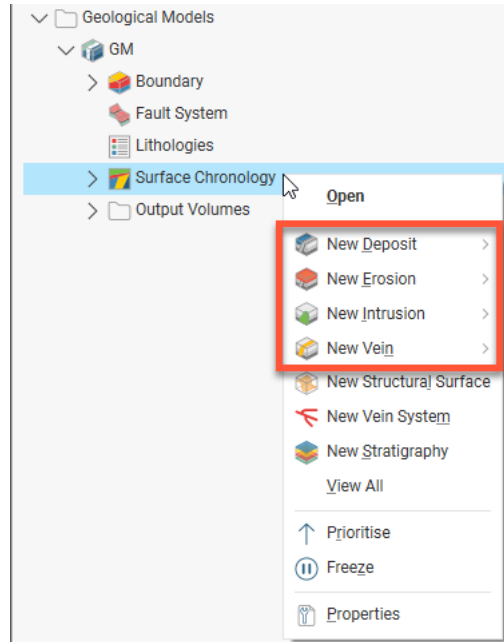

Deposit and Erosion Surfaces

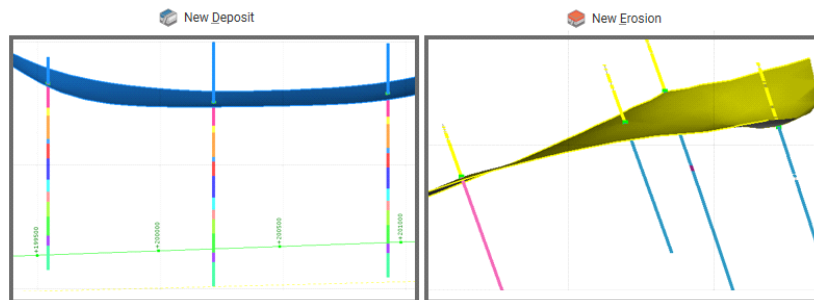


One set of contact points - above **OR** below the unit of interest

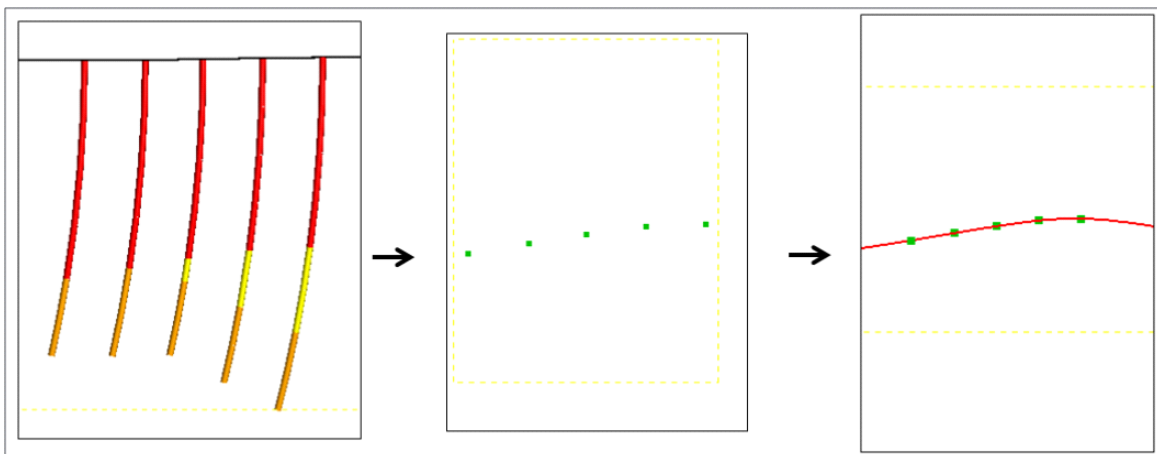


Only **ONE** contact point per unit per borehole


Deposit surface volumes **cannot** cut into an underlying older unit

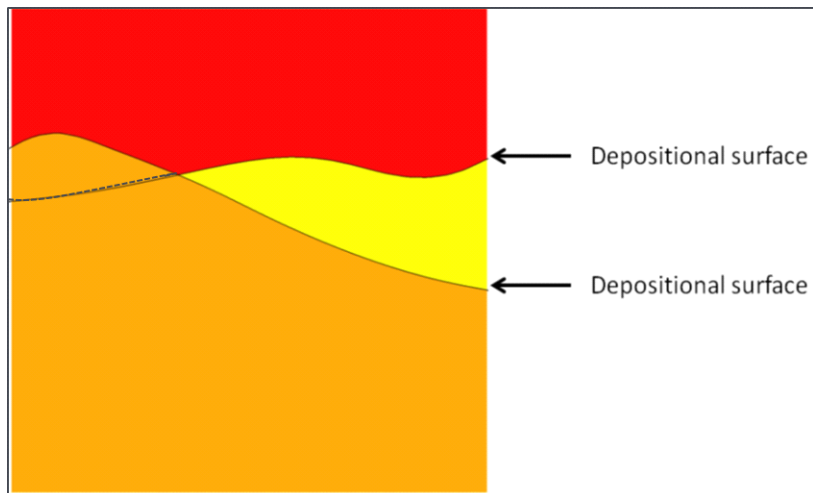

Erosion surface volumes **can** cut into an underlying older unit

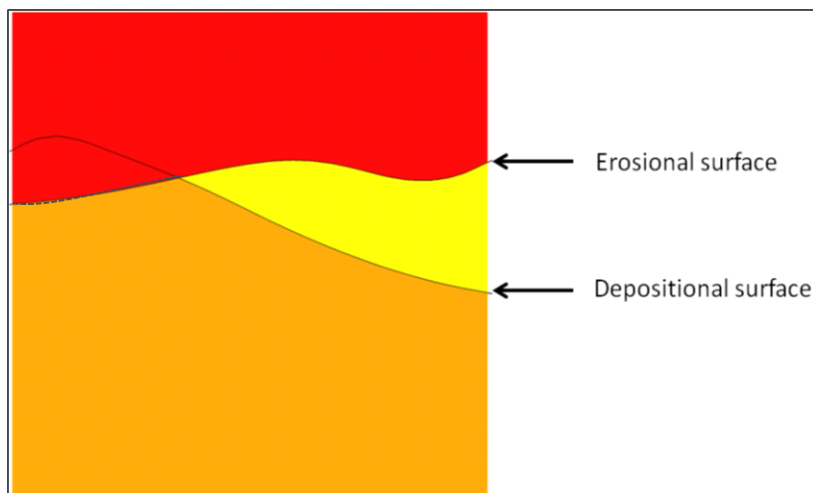


Intrusion Surfaces

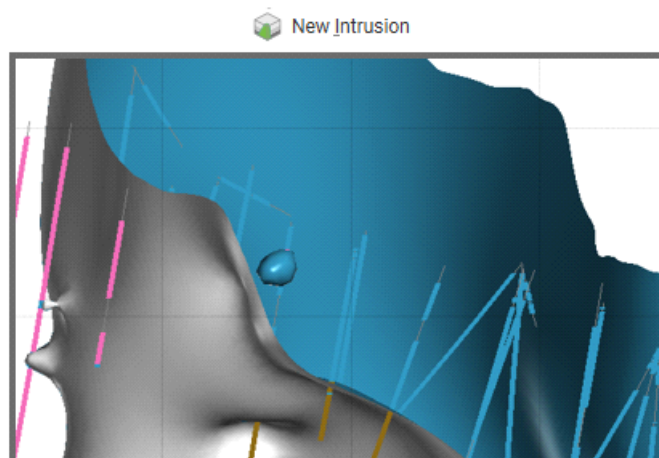


4 | Leapfrog Works Surface Types

One set of contact points - above **AND** below the unit of interest

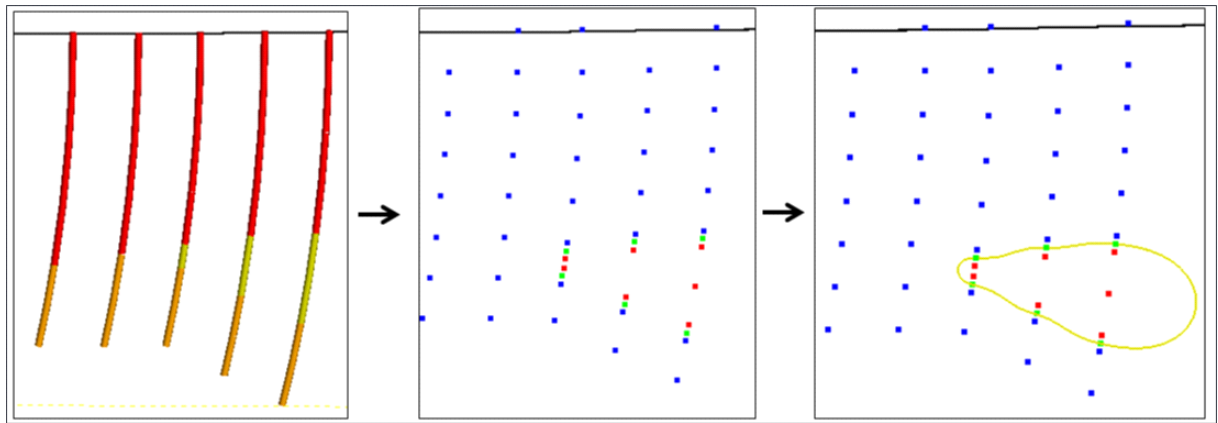


Can have **MULTIPLE** contact points per unit per borehole
Intrusion volumes **enclose** the unit of interest

Vein Surfaces

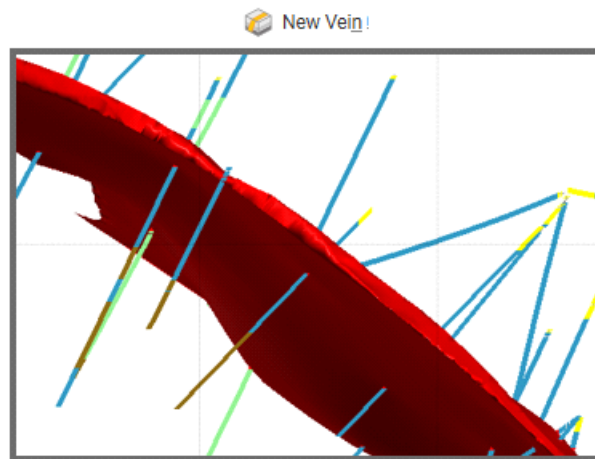



Two sets of contact points - above **AND** below the unit of interest

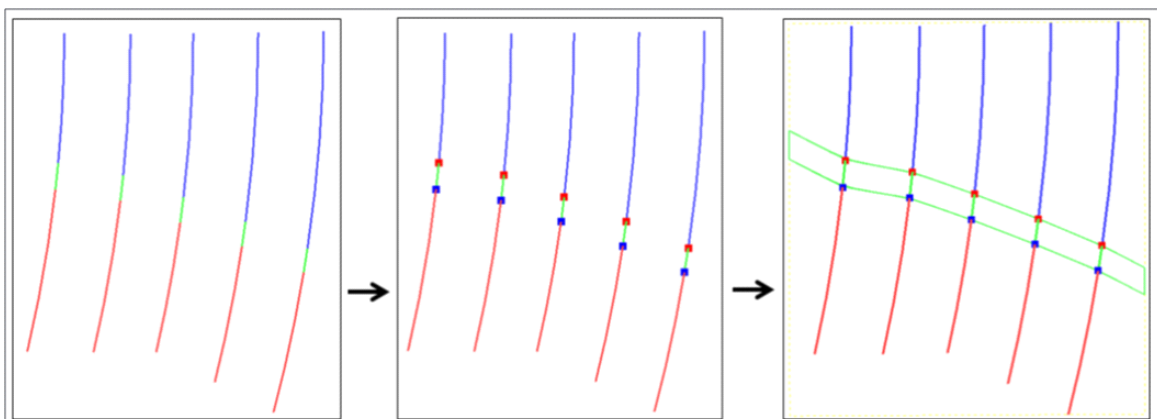


Creates a Hanging wall (HW) set **AND** Footwall (FW) set of contact points

Specific Function Surfaces

Structural Surfaces

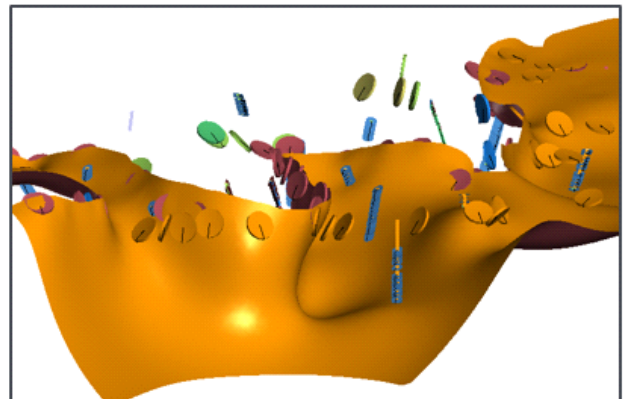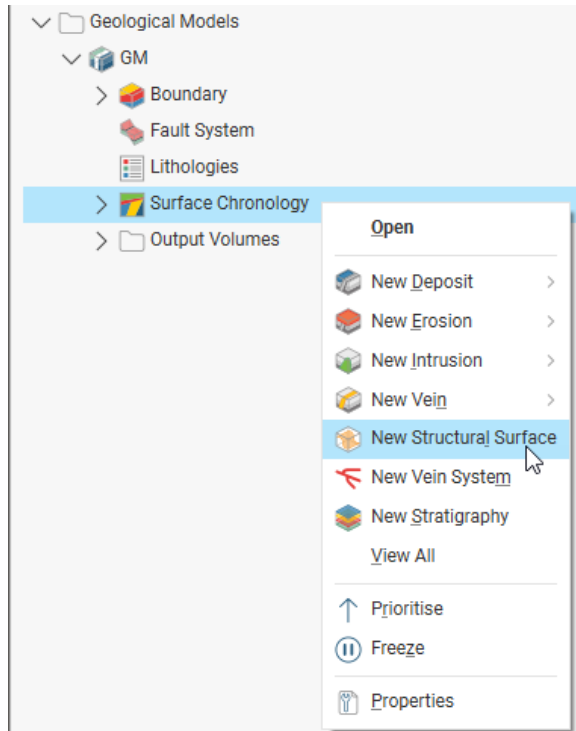


Incorporates **non-contact** structural data with on-contact data (drilling data, surface mapping)

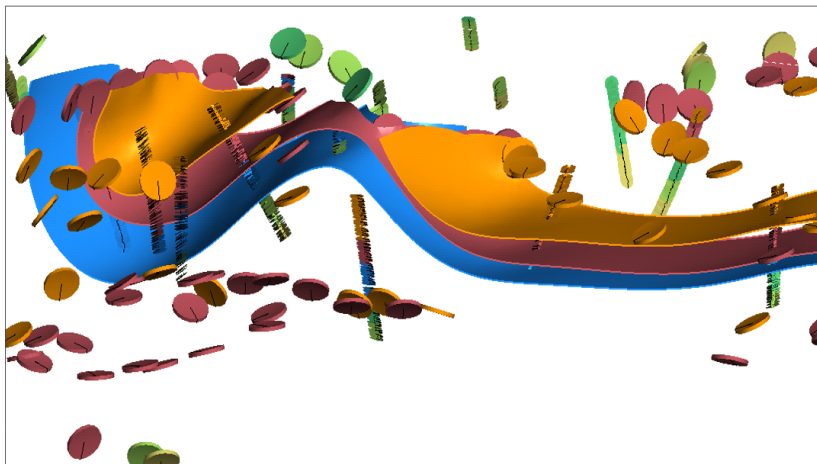


Can be used for a **Deposit**, **Erosion** or **Intrusion** contact type

Offset Surfaces

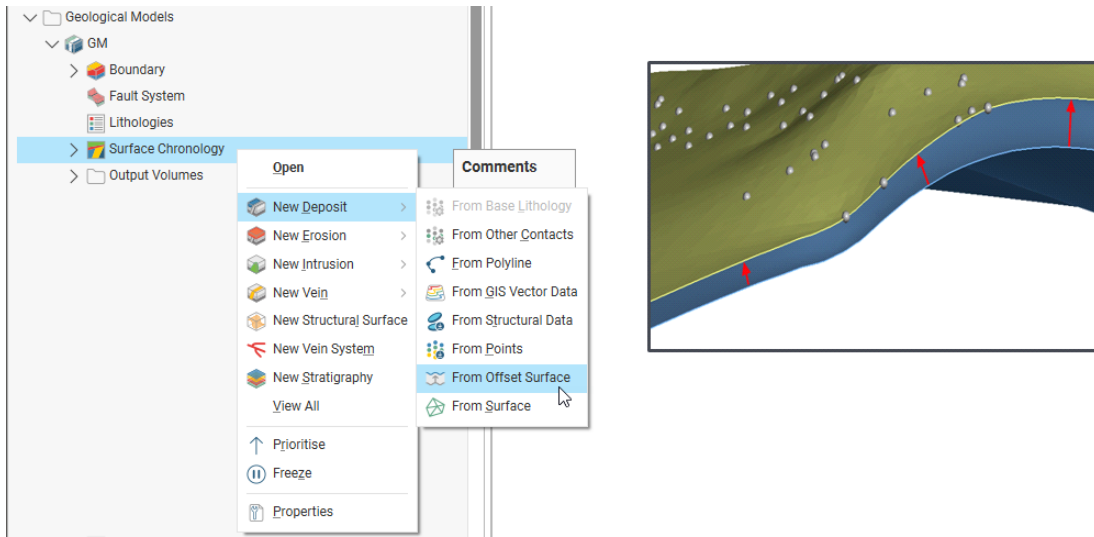


Maintains **consistent offset** while **honouring** contact points - for stratigraphy with common deformation

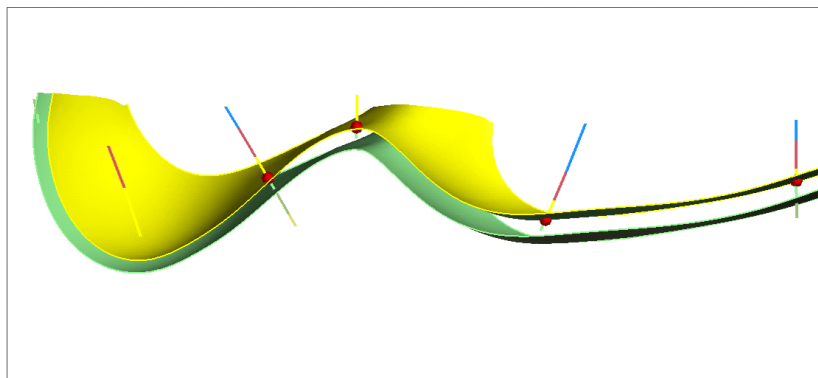


Can be used for a **Deposit** or **Erosion** contact type

Vein System Surfaces

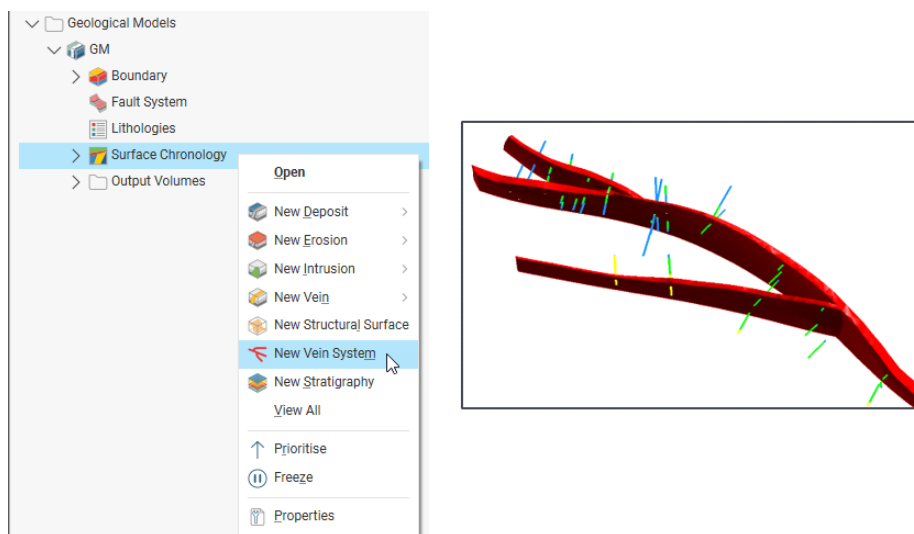


Combines individual veins into a **single interconnected system** of veins

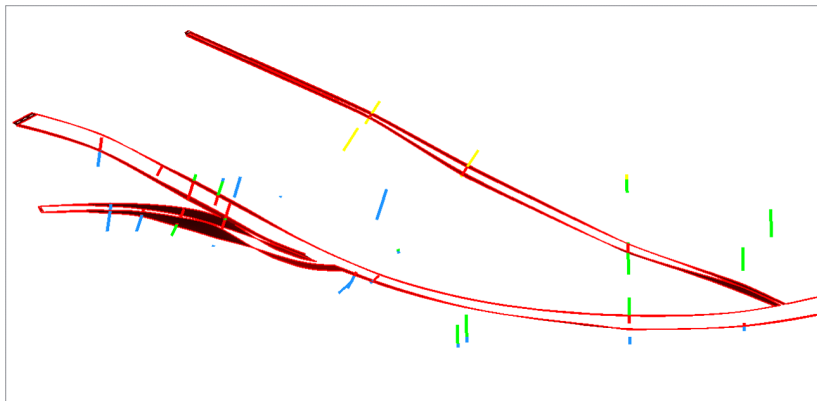


Can be used for a **Vein** contact type

Stratigraphic Sequences

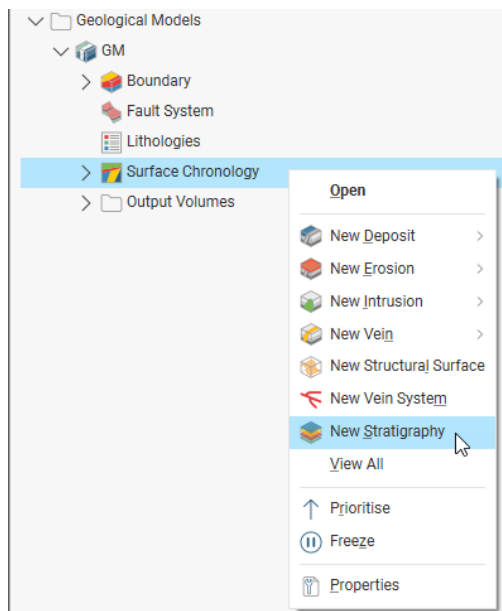

Generates **multiple** surfaces in a stratigraphic sequence in a **single pass**

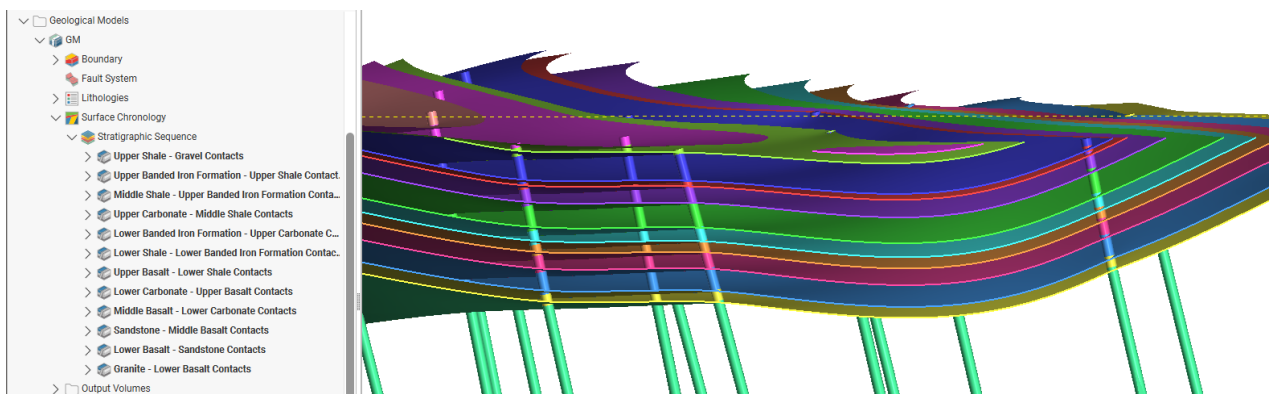

Can be used for a **Deposit** or **Erosion** contact type